


# Tablet PC

with the installed OPENview app / OPENweb app

## Quick start guide (Last updated 2015-02-05)


### Device description

Front View

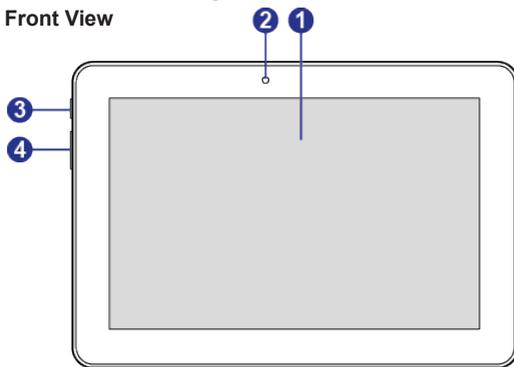

1. Touch Screen
2. Front Camera
3. Power Key
4. Volume Keys

Rear View

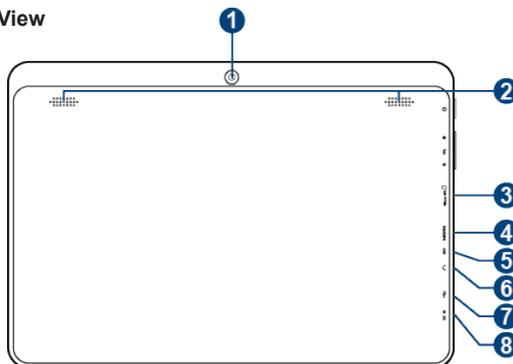

1. Rear Camera
2. Speakers
3. Micro-SD Cardreader
4. Mini-HDMI Port
5. Microphone
6. Earphone Jack
7. Mini-USB Port
8. Power DC Input

## Initial commissioning

To switch on the control unit, press and hold down the on/off switch for approx. 3 seconds. To "wake up" the unit from standby mode, hold down the on/off switch for another second.

## Handling the battery and charging

Before using the control unit for the first time, the battery must be fully charged.



To do this, **only** use the charger that supplied with the control unit.

### Procedure:

1. Insert the charger cable into the charging socket on the control unit. The control unit has an integrated charging control to properly charge the battery.
2. The battery symbol displays a lightning bolt during the charging process.



To maintain the service life and capacity of the battery as long as possible, the battery should only be charged if it is empty.



The first battery charge should last for at least 12 hours.

## Network connection

The control unit must be connected to the network. For details, refer to the operating instructions of the control unit.



The guidelines of the IT network must be observed and should be reviewed.

If the network connection is to be established using the Ethernet connection, a network cable and the supplied USB network adapter are required.

### Procedure:

1. Connect the network cable to the control unit's USB interface via the USB network adapter.
2. Then enter the necessary information under "Settings → Wireless & Networks" in the "Ethernet" menu item.
3. Confirm this information using the "Software Back" button.

## Authentication



Passwords should not be stored together with other OPEN EMS switch cabinet or OPENweb Server documents. Make sure that respective password is protected from unauthorized access.

### OPENview app authentication:

The setting level of the OPENview app is protected. The user name and password are defined at the factory. The user name cannot be customized. The password can be customized if necessary.

**User name:** Administrator

**Password:** admin



If the password is lost, for example, it cannot be reset or changed outside the OPENview app. Instead, it can only be accessed through the setting level of the OPENview app.

### OPENweb app authentication:

The setting level of the OPENweb app is not protected. The access authorization of the OPENweb Server and the corresponding passwords are controlled by the OPENweb Server. To do this, you must know the corresponding settings or the user administration on the OPENweb Server.

## Commissioning OPENview app / OPENweb app

### Procedure:

1. To commission the OPENview or OPENweb app, the control unit must be switched on. The factory preset startup screen of the control unit is displayed.
2. To start the OPENview or OPENweb app and access the corresponding setting level, tap the icon of the respective app.



### Only with OPENview App:

Access to the setting level is protected. For authentication purposes, the user name and password must be entered (see section Authentication). Confirm the entry with "OK".

## User manual

You must have knowledge about OPENview or OPENweb to set up the OPENview and OPENweb app. For details, refer to the corresponding user manuals.

© Copyright 2015 DEOS control systems GmbH

This manual was prepared with the utmost care. DEOS control systems GmbH, however, is not liable for damage or losses resulting from or in connection with errors, ambiguities or other circumstances. Errors and changes excepted.

**Note:**

We are pointing out that the software and hardware names and brand names of the respective companies used in this manual are generally protected by brand, trademark or patent laws.

# DEOS.AG

DEOS control systems GmbH  
Birkenallee 76  
48432 Rheine  
Germany

 +49 5971 911332-0  
 +49 5971 911332-995  
[info@deos-ag.com](mailto:info@deos-ag.com)  
[www.deos-ag.com](http://www.deos-ag.com)